




MY Jun M3 Highland Dashboard Trim Replacement with Dynamic Ambient Lighting 3.0 Installation Instructions



Installation Video



Installation Manual



Tutorial Manual & Video

Scan the QR code to get the manual & video

Need Help? Contact Us Now!



Call us at **1 (949) 992-7017**



Email: inquiry@hansshow.com



<https://www.hansshow.com/>

If you have any questions

Installation: **19493584793**

Warnings and Disclaimers

Important notice: You are welcome to purchase our company's products. In order to protect the legitimate rights and interests of users, we hereby remind users that you must carefully read and fully understand the terms of this statement before using this product. If you use this product, your use will be deemed to be an acknowledgment of the entire content of this statement, and you agree to be bound by the following terms of this statement, and at the same time bear the consequences caused by irregular use. Hansshow Company reserves the right to update the above documents. Please be sure to operate this product according to the instructions.

Telephone:1 (949) 992-7017

Installation: 19493584793

Email: inquiry@hansshow.com


(UTC-7/PST)9:00AM-6.30PM (Monday to Friday)

Precautions for Use


- 1-Before installation, check whether the product list is complete or damaged.
- 2-The installation instructions may be slightly different from the actual operation. If there is any difference, please contact us according to the actual situation.
- 3-Warning: Please do not disassemble any parts by yourself. Any improper operation is not covered by the warranty.
- 4-Before installing the product, watch the installation video and instructions.
- 5-Check whether the installed product functions normally.

Installation Video

Scan the QR code



Package Included:

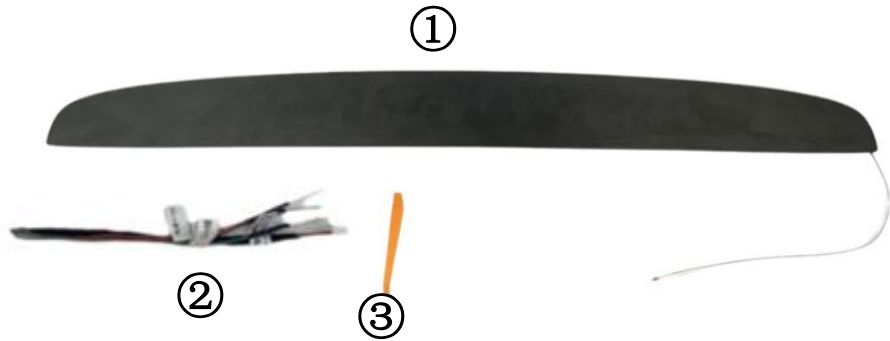

①	Instrument long belt atmosphere light * 1	②	Power cord*1
③	Crowbar*1	④	
⑤		⑥	

NOTE: For faster installation, be sure to read these instructions carefully.

Hansshow MY Jun M3 Highland Dashboard Trim Replacement with Dynamic Ambient Lighting 3.0 Installation Instructions



1. Remove the long dashboard trim panel as shown.



2. Remove the right front door dashboard triangle trim as shown above.



3. Route the light strip cable through the gap to the passenger-side triangle trim location as shown.






4. Install instrument panel ambient lighting.



5. Remove the door sill trim clips.





6. Remove the door sill trim.

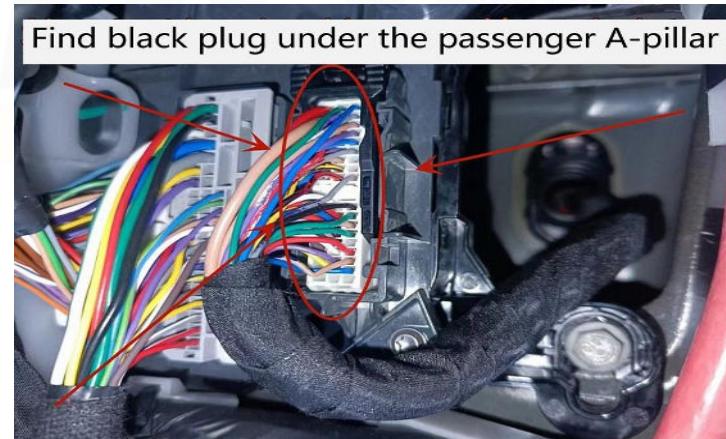

7. Find black plug under the passenger A-pillar.

MY Jun M3 Highland Dashboard Trim Replacement with Dynamic Ambient Lighting 3.0 Installation Instructions

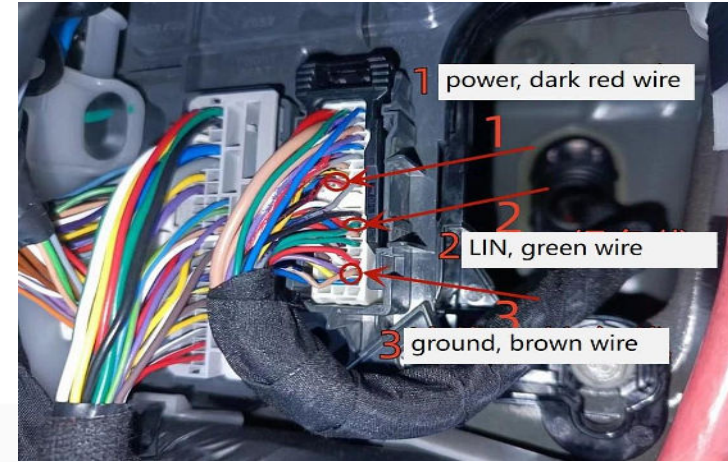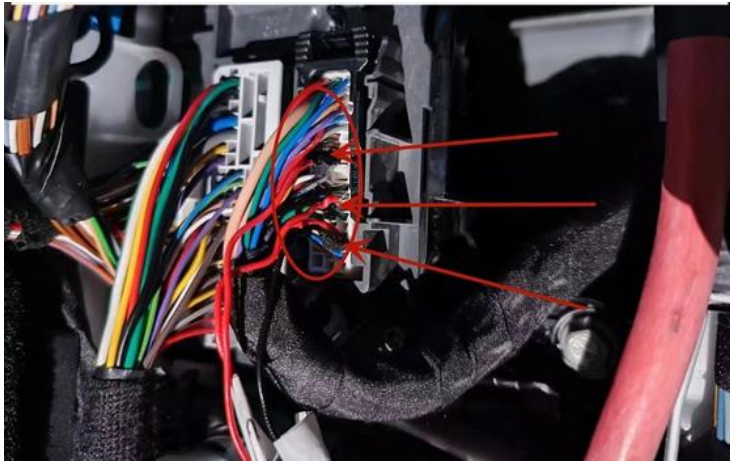


8. Insert the pin wires comes with the product into the correct position..



10. Reinstall the dashboard triangle trim and door sill rubber strips.



11. Installation Complete.

Issue	Cause	Solution	
Ambient light is off	1. The wiring harness is not properly plugged in. 2. The ambient light is broken.	1. Reseat the wiring harness 2. Replace the ambient light strip	
Control method	Mobile App		

Installation Manual

Hansshow provides 1-year extended warranty service.
Send us your customer number to get 1-year full warranty.

Message and Telephone: +1949-992-7017

Installation Appointment:+1 (949) 358-4793

Email: inquiry@hansshow.com

(UTC-7/PST)9:00AM-6.30PM (Monday to Friday)



www.hansshow.com

Designed by HANSSHOW

Need Help? Contact Us Now!

If you have any questions, please contact us at

  **1 (949) 992-7017**

(UTC-7/PST)9:00AM-6.30PM (Monday to Friday)

Installation: 19493584793  inquiry@hansshow.com  www.hansshow.com

Before contacting our customer support, please have your **order number, videos, or images** (if needed) ready for a fast and great solution. Send your customer number to get Hansshow **one-year** extended warranty.